HONDA

INSTALLATION INSTRUCTIONS

Accessory	Application	Publications No.
TRUNK APRON P/N 08P42-S82-100	1999 ACCORD 2-DOOR	AII 20046
		Issue Date OCT 1998

PARTS LIST

Trunk apron

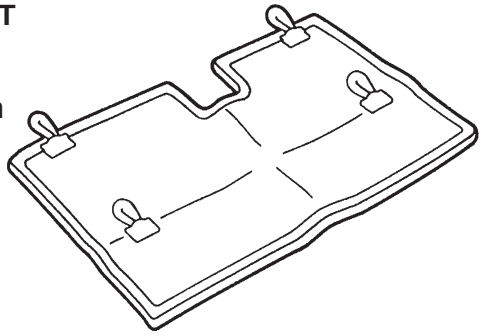

2 Hooks

2 Studs

2 Wellnuts

2 Washers

TOOLS REQUIRED

Utility knife
Eye protection (face shield, safety goggles, etc.)
Drill
8 mm and 13 mm Drill bits
Pushpin

INSTALLATION

Customer Information: The information in this Accessory Installation Instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your car. These procedures should not be attempted by “do-it-yourselfers.”

1. Thread a stud into each hook.

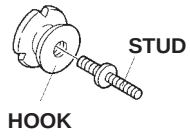

2. Open the trunk. Locate the two dimple marks on the rear trim panel. Using the pushpin, mark the rear trim panel at the center of the dimple marks.

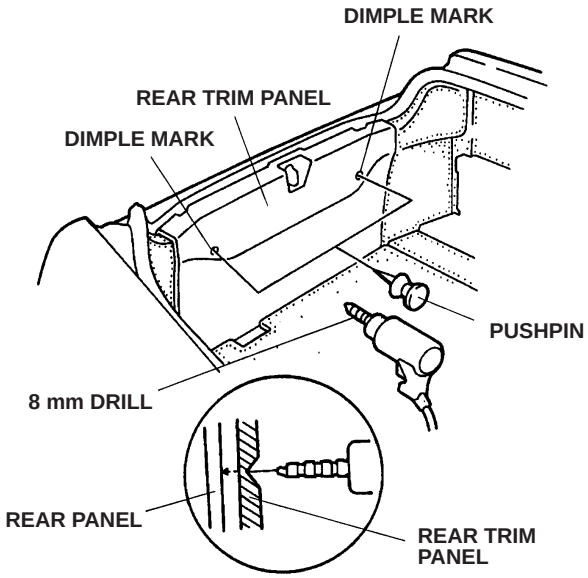

3. While wearing eye protection, drill 8 mm holes through each dimple on the rear panel, and through the sheet metal behind it.

4. Remove the rear trim panel (four expansion clips).

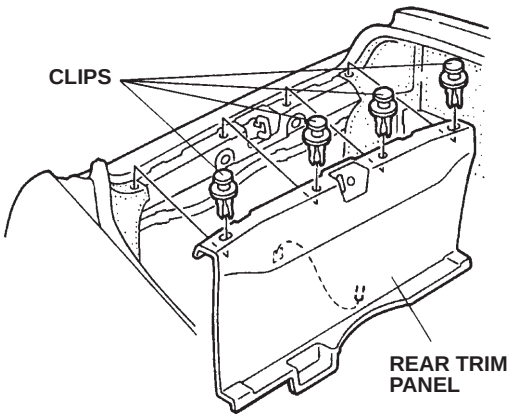

© 1998 American Honda Motor Co., Inc. – All Rights Reserved

5. While wearing eye protection, enlarge the two 8 mm holes in the rear trim panel to 13 mm.

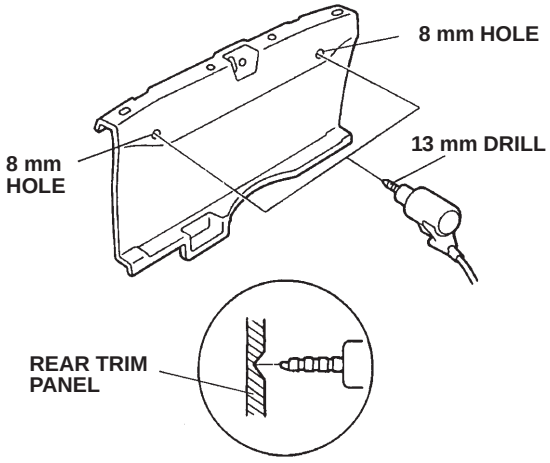

6. Reinstall the rear trim panel on the rear panel.

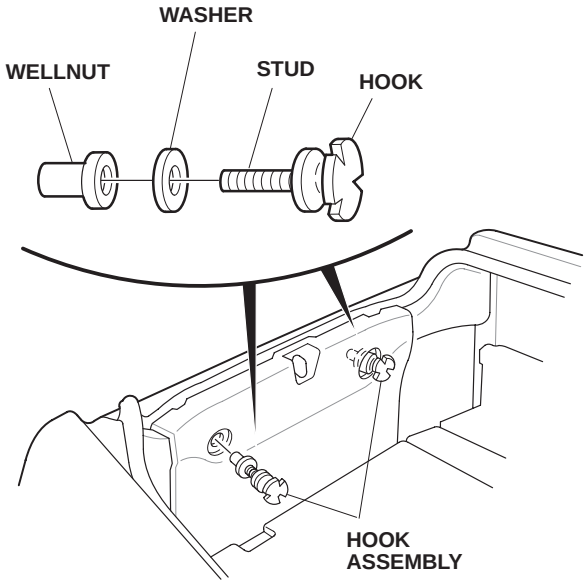

7. Loosely assemble the hook, washer and wellnut as shown. Install the hook assembly through the 13 mm hole and into the 8 mm hole; then tighten the hook by turning it clockwise with your hand.

8. Attach the trunk apron to the hooks.

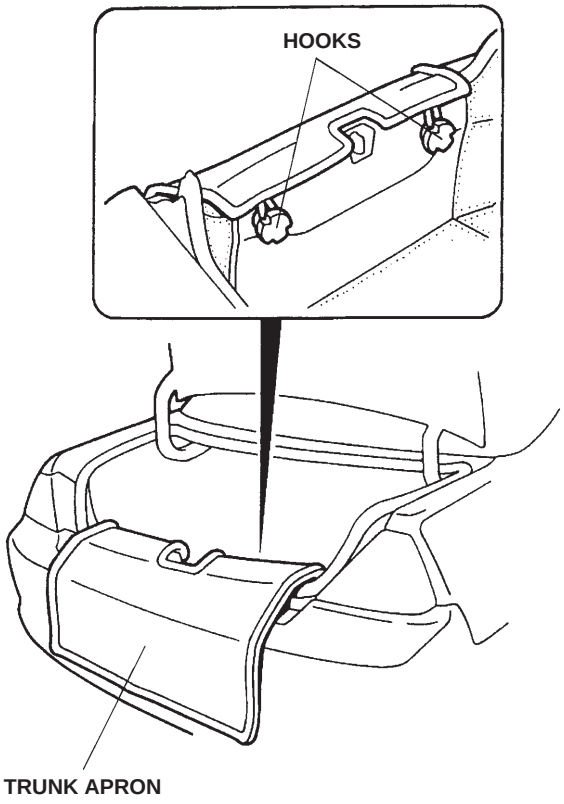

TRUNK APRON STORAGE

Flip the trunk apron into the trunk. Using the two unattached bungee loops, fold the trunk apron and attach it to the hooks.

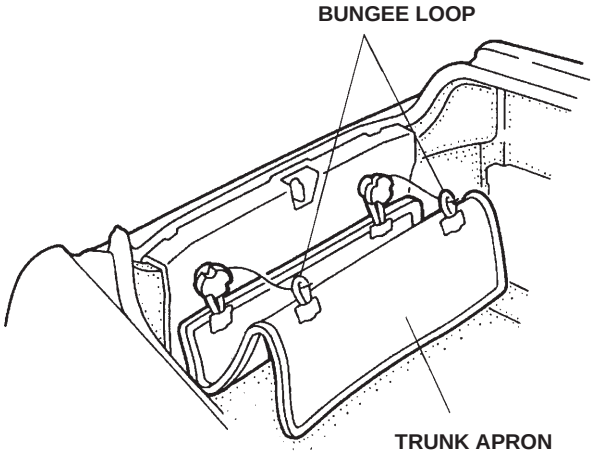

AII 20046 (9810)

© 1998 American Honda Motor Co., Inc. – All Rights Reserved